



**Slink attaching pilot chute to bridle**

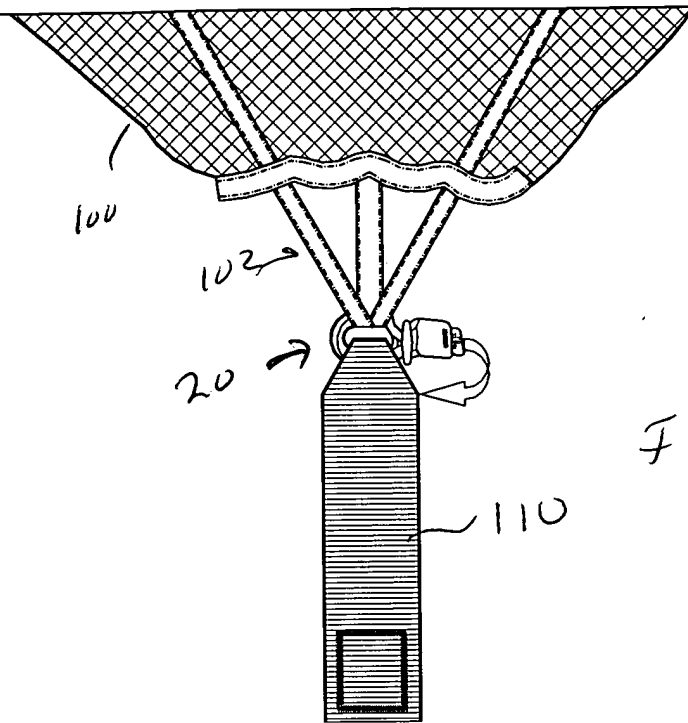


Figure 14

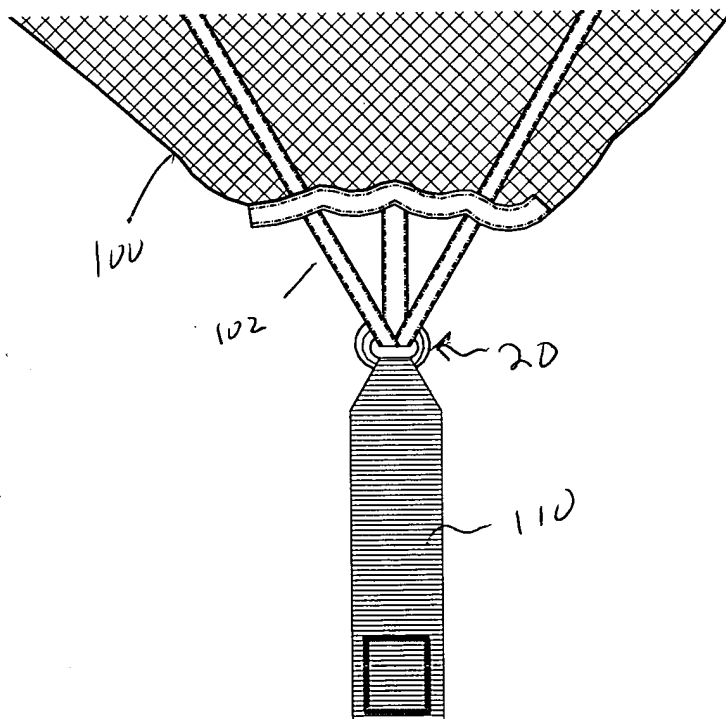


Figure 15



# Slink attaching PCA (pilot chute attachment) to bridle

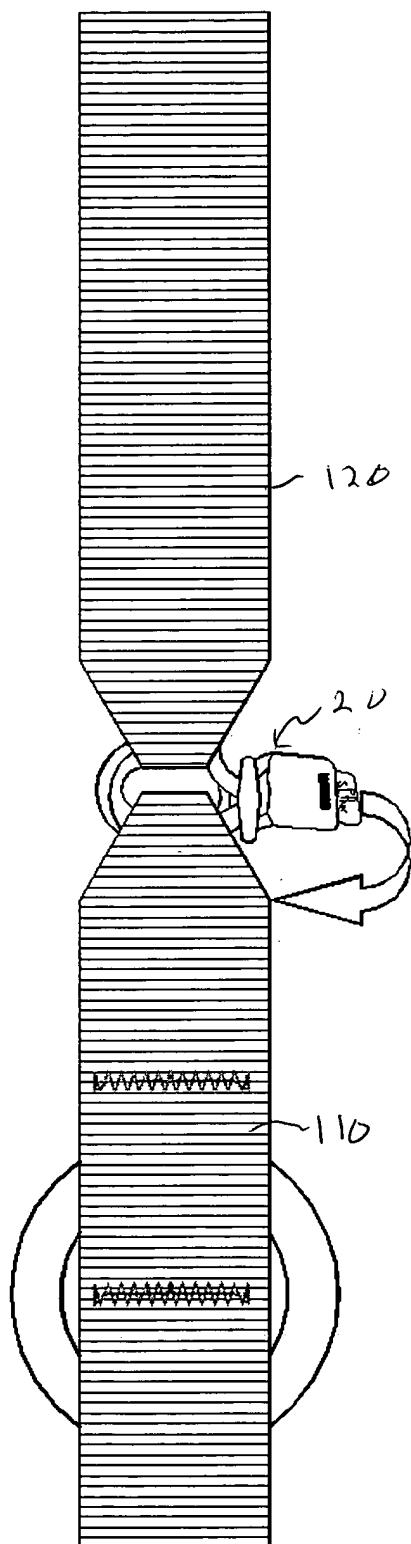


Figure 16

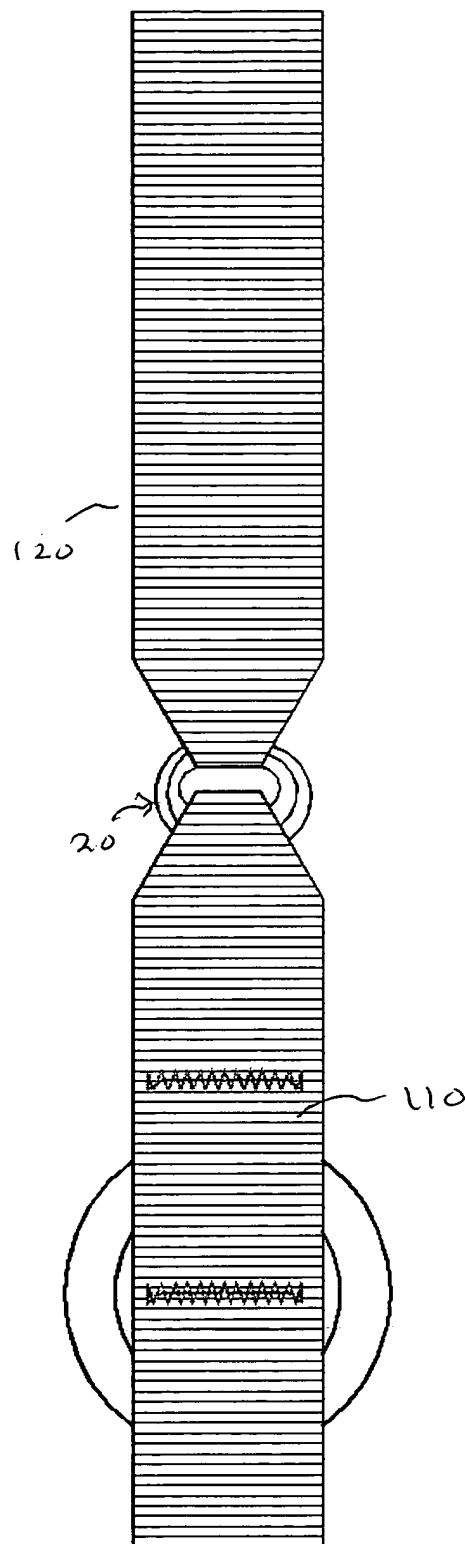


Figure 17